

I/O Ports programming

**Kizito NKURIKIYEZU,
Ph.D.**

AVR I/O ports

- All AVR Ports have true Read-Modify-Write functionality. Each pin on a port can be modified without unintentionally modifying any other pin
- Three I/O memory address locations allocated for each port
 - Data Register – PORTx (Read/Write)
 - Data Direction Register – DDRx (Read/Write)
 - Port Input Pins – PINx (Read)

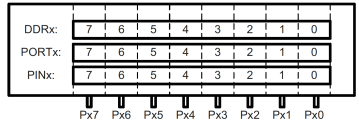


FIG 1. Relations Between the Registers and the Pins of AVR

AVR I/O ports

- DDRs and PORTs have a zero initial values for all bits being 0.
- Writing a 0 to a bit in DDRD sets the corresponding pin to input (and a 1 will set the pin to output). This implies that all pins are initially configured for input.
- When set as an input pin, a pull-up resistor can be activated by writing a 1 to the corresponding PORTD bit.
- Output buffer can source or sink an absolute maximum current of 40mA per I/O pin and the whole device can cope with a total of 200mA. (see datasheet)

Operating Temperature.....	-55°C to +125°C
Storage Temperature.....	-65°C to +150°C
Voltage on any Pin except RESET with respect to Ground	-0.5V to V _{CC} +0.5V
Voltage on RESET with respect to Ground.....	0.5V to +13.0V
Maximum Operating Voltage	6.0V
DC Current per I/O Pin	40.0 mA

Other usage considerations

- Regardless of the setting of the DDRx register, the port pin can be read from PINx. Thus, an driven output value in PORTx can always be read in PINx.
- When the "pull-up disable bit" in the Special Function I/O Register (SFIOR) is set, all pull-ups are disabled regardless of the setting of DDRx and PORTx. Pullups are also disabled during reset.
- Input pins have a 1.5 clock cycle delay before a new value can be read. Thus 1 NOP instruction (short delay) necessary to read updated pin
- Use pull-ups on unused I/O pins to lower power consumption.
- Using alternative functions of some port pins does not effect other pins.
- When configuring pins as output pins with HIGH logic, make sure that the pin is not directly connected to the ground.
- When configuring pins as output pins with LOW logic, make

Bare metal AVR I/O programming

- How do you change the state of a specific pin in an AVR MCU?
- For instance, let us say we want to blink an LED connected to pin 5 of PORTB of the ATMEGA328.
- In arduino, this is done with the following code

```
1 #define LED_BUILTIN 13
2 void setup() {
3     // initialize digital pin LED_BUILTIN as an
4     // output.
5     pinMode(LED_BUILTIN, OUTPUT);
6 }
7 void loop() {
8     digitalWrite(LED_BUILTIN, HIGH); // turn the
9     // LED on
10    delay(1000); // wait for
11    // a second
```

Bare metal AVR I/O programming

- The above code, however, hides lots of details
- In reality, the code is changing the state of some memory address.
- If you know the memory address, you can manually change it
- These details are typically found in a datasheet of each MCU
- In the case of the ATMEGA328, this information is found in Figure 7-2 of the [datasheet](#)


32 Registers	0x0000 - 0x001F
64 I/O Registers	0x0020 - 0x005F
160 Ext I/O Reg.	0x0060 - 0x00FF 0x0100
Internal SRAM (512/1024/1024/2048 x 8)	0x02FF/0x04FF/0x4FF/0x08FF

FIG 2. Data Memory Map


Bare metal AVR I/O programming

In a similar manner, page 100 of the datasheet shows the address of PORTB

PORTB – The Port B Data Register



DDRB – The Port B Data Direction Register



PINB – The Port B Input Pins Address^[1]




FIG 3. PORTB Data Register

Bare metal AVR I/O programming

As we know the address of PORT, the previous code could be written as

```
1 int main (void)
2 {
3     while(1)
4     {
5         // Turn on the LED
6         *((volatile byte *) 0x25) |= (1 << 5);
7         // Delay 1 second (Not implemented)
8         // Turn off the LED
9         *((volatile byte *) 0x25) &= ~(1 << 5);
10    }
11 }
```

LISTING 2: Blink LED with AVR registers

Bare metal AVR I/O programming

- `#include <avr/io.h>` header includes the appropriate IO definitions for the device that has been specified by the `-mmcu=` compiler command-line switch.
- For example, for the ATMEGA328, this header will indirectly include another header `"/avr/include/avr/iom328.h"` which define statements are used to make shorthand notation for ports and bits.

```
1 #define PINB _SFR_IO8 (0x03)
2 #define DDRB _SFR_IO8 (0x04)
3 #define PORTB _SFR_IO8 (0x05)
```

Bare metal AVR I/O programming

- We will use the AVR GCC Compilers for AVR¹ and the AVR Libc².
- A simple introduction can be found at [this website](#)³.
- With this approach, the blink LED can be simplified

```
1 #include <avr/io.h>
2 #include <util/delay.h>
3 int main(void) {
4     DDRB= (1<<PB5);
5     while (1) {
6         PORTB= (1<<PB5);
7         _delay_ms (1000);
8         PORTB= (0<<PB5);
9         _delay_ms (1000);
10    }
11 }
```

LISTING 3: Blink LED with AVR registers

¹<https://gcc.gnu.org/wiki/avr-gcc>

²<https://www.nongnu.org/avr-libc/>

³<https://sites.google.com/site/avrtutorials/tutorials/first-program>

The end